



1

1. Loosen both screws that hold the two halves of the rotor casing together by two full rotations (Torx-key T 10).



2

2. Then open the rotor casing from the bottom a gap wide.



3

3. Pull the bar out of the rotor casing.



4

4. In its place, insert the BETA-Flex Mini.



5

5. Press the two halves of the rotor casing together again firmly and tighten the screws again.

6. Repeat the process with the other rotor casing.



1

1. Loosen both screws that hold the two halves of the rotor casing together by two full rotations (Torx-key T 10).



2

2. Then open the rotor casing from the bottom a gap wide.



3

3. Pull the bar out of the rotor casing.



4

4. In its place, insert the BETA-Flex Mini.



5

5. Press the two halves of the rotor casing together again firmly and tighten the screws again.

6. Repeat the process with the other rotor casing.